

Premier Series

Engineered for professional installations, the Premier Series provides unsurpassed flexibility in all areas of system design and performance. High level menu driven programming via a comprehensive range of LCD keypads simplifies even the most complex design requirements, minimising set up time and maximising reliability.

Installation is further simplified by a host of innovative features including multiple terminals per zone for ease of wiring. Where communication of system events is a priority, a wide range of plug-on multi-protocol communicators are available plus full upload/download via Wintex™ software.

Premier 24



8 Zones Expandable To 24
16 User Codes
500 Event Log Time & Date Stamped
Plug-on Digimodems
Available in Polymer Housing



Premier 48



8 Zones Expandable To 48
4 Areas
25 User Codes
500 Event Log Time & Date Stamped
Plug-on Digimodems



Premier 88



8 Zones Expandable To 88
8 Areas
50 User Codes
1000 Event Log Time & Date Stamped
Plug-on Digimodems



Premier 168



8 Zones Expandable To 168
16 Areas
100 User Codes
2000 Event Log Time & Date Stamped
Plug-on Digimodems



Premier 640



Expandable To 640 Zones
16 Areas
100 User Codes
2500 Event Log Time & Date Stamped
Plug-on Digimodems



Premier Series

The Premier Series represents the pinnacle of control panel design, providing a security solution to match any installation criteria. Each panel utilises the same intuitive programming platform and peripheral devices, ensuring instant product familiarity across the range.



Keypads Page 28

Compatible keypads: Premier RKP8 Plus/RKP16 Plus/LCD/LCDP/LCDL/LCDLP and flush mount versions.

Expanders Page 30

Compatible expanders: Premier 4XP/8XP/8XE†/OP8†/OP16/24iXD†/6oiXD/RM8 and PSU200XP.

†Premier 24 only







Communicators Page 31

Compatible communicators: Premier Com300/Com2400/ComISDN/ComIP/ComGSM and RPi9 RadioPad.

Software Page 33

Compatible software: Wintex upload/download and Montex monitoring software.

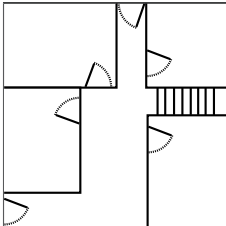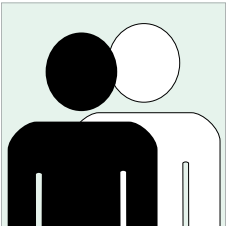

	Keypads 	Max. No. of Zones 	Areas 	User Codes 
Premier 24	4	24	1	16
Premier 48	4	48	4	25
Premier 88	8	88	8	50
Premier 168	16	168	16	100
Premier 640	64	640	16	100

Features & Functions

	Premier 24	Premier 48	Premier 88	Premier 168	Premier 640
Number Of Zones (Onboard)	8	8	8	8	0
8 Zone Expanders	2	4	8	16	64
Event Log Time & Date Stamped	500	500	1000	2000	2500
SMS Text Messaging	•	•	•	•	•
Plug On Digimodem/ISDN Digimodem	•	•	•	•	•
Single Pole Zone Wiring	•	•	•	•	•
Double Pole Wiring		•	•	•	•
End Of Line Wiring	•	•	•	•	•
Part Sets	3	3 PER AREA	3 PER AREA	3 PER AREA	3 PER AREA
Programmable Outputs (Control Panel)	9	10	13	13	13
Multi Format Communication Protocols	•	•	•	•	•
Remote & Local Upload/Download	•	•	•	•	•
Printer Output	•	•	•	•	•
Conventional Fire Detector Compatible		•	•	•	•
EN 50131-1	G2/3 †	G3	G3	G3	G3

† Grade 3 in Metal Housing